



- 1x BAKFlip cover
- 2x Cover rails
(driver side & passenger side)
- 2x Drain hose
- 4x Star knobs with bolts
- 2x Screws, #40 size
- 2x Screws, #50 size
- 2x Screws, self tapping
- 2x Plates with adhesive backing

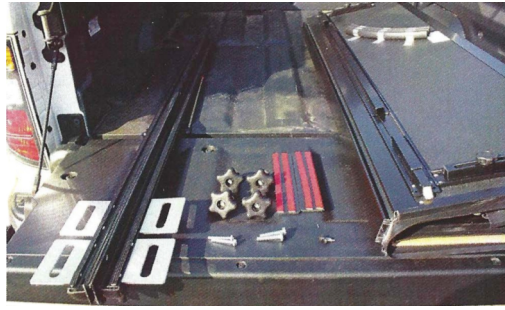


1

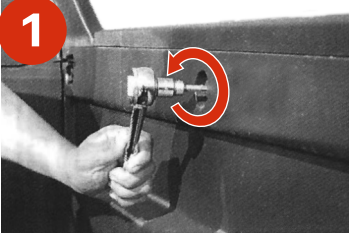


Remove the center bolt with a #40 star bit.

2




Remove the front tie downs with a #50 star bit.

2

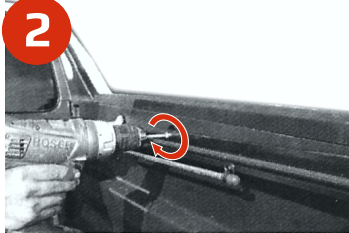


Attach the rails using #40 screws in the center holes.

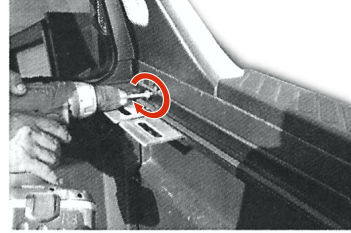


Use a #50 screw on each side at the front end. (there are two holes, but only one is needed to attach the rail at the front).


3

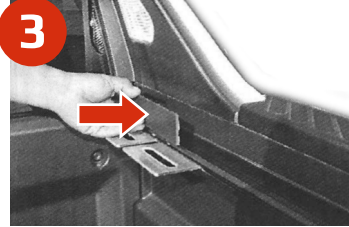

Peel the backing from the plate and adhere the plate to cover the recessed area above the rails. This will help prevent moisture from penetrating the recessed area after the cover is installed.


4

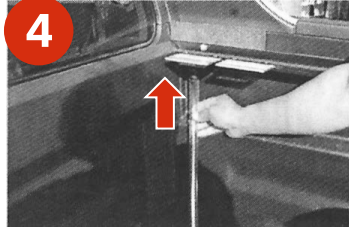

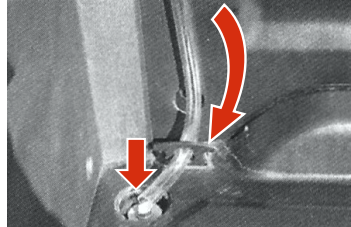


Attach the drain hose to the rail cap. Run the other end of the hose down the bed side wall, through the tie-down, ending over the floor plug.

5

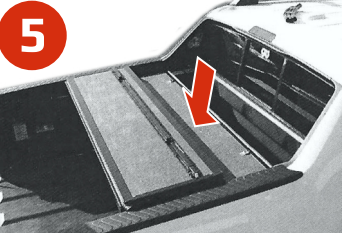


Position the bed cover on the rails, it will click into position.




Push the cover forward until the rubber gasket seals tightly against the cab wall.

6




Fold the cover open to ensure it fits properly.

Insert the elevator bolts from the top, (two per side).

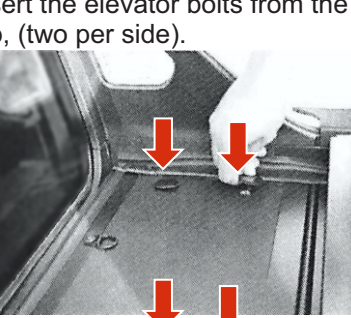


Thread the star knobs onto the bolts from below. Hand tighten the knobs.

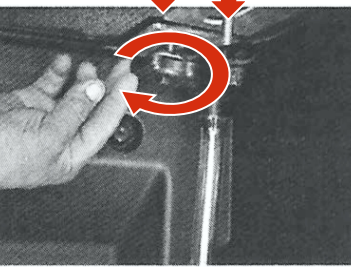


7


To drive with the cover open- lift the cover to vertical or past vertical, pivot the prop rod to rest in the cover bracket.

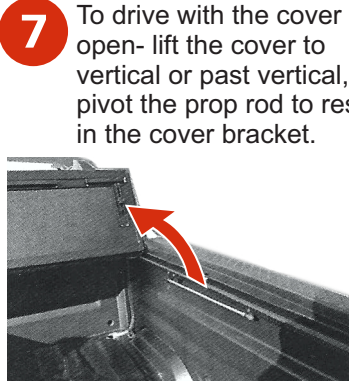

Loosen the bracket knob, slide the locking bracket to engage the prop rod.

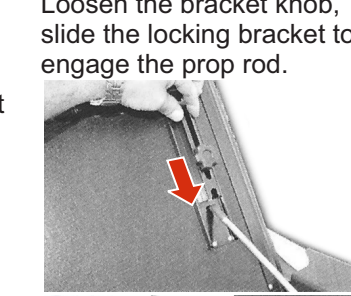

Tighten the knob.

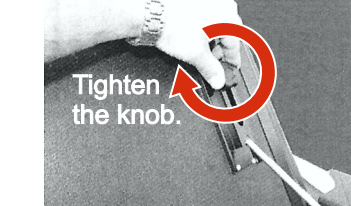

All of the steps are repeated for both sides.